



# ScanX View

A versatile software platform with solutions for every application

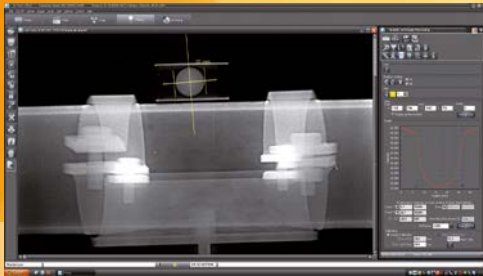


### Calibration

Automatic calibration using a ball bearing or any other object with a known dimension, like the outer dimension of a pipe.

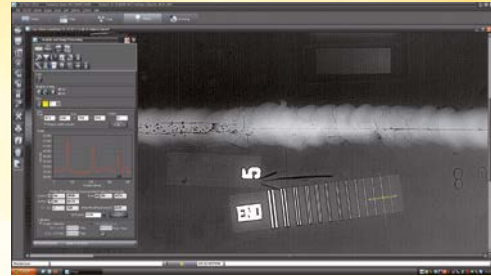


### BSR

Automatic tool to determine the BSR of an image in accordance with EN17636-2.

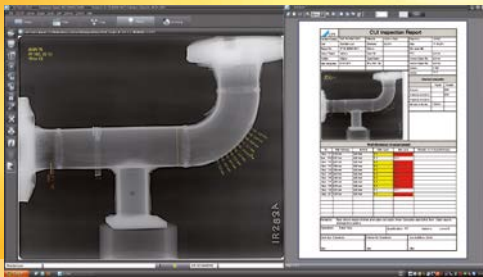


### Report

Report function. Gives the user the opportunity to produce a report populated with the information and data along with thumbnail images. We provide the template to your requirements.

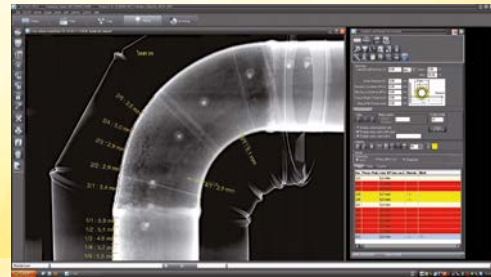

### Wallthickness

Automatic measurement tool, single point or multiple measurements along a straight line or around a curve. Set up to give warnings when wall loss reaches a critical level.

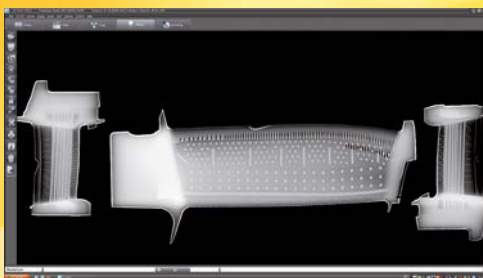

### Aerospace

Ideal for Aerospace applications where consistent quality and highest resolution is required.



### Tailored to fit your needs

A versatile software platform that provides the information and data which is relevant for your particular application and workflow.